

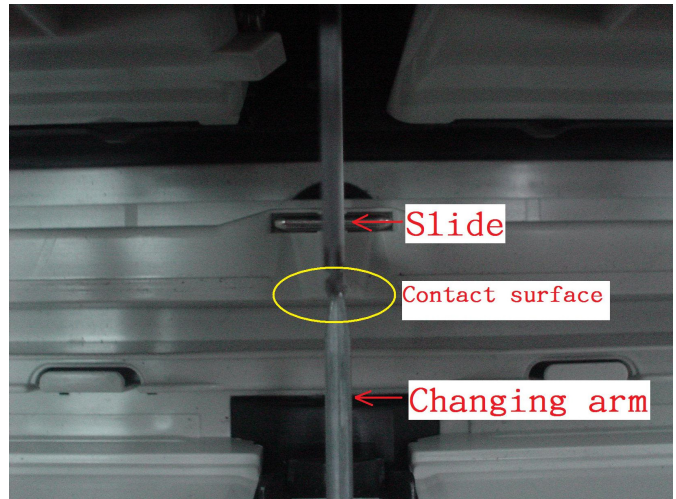
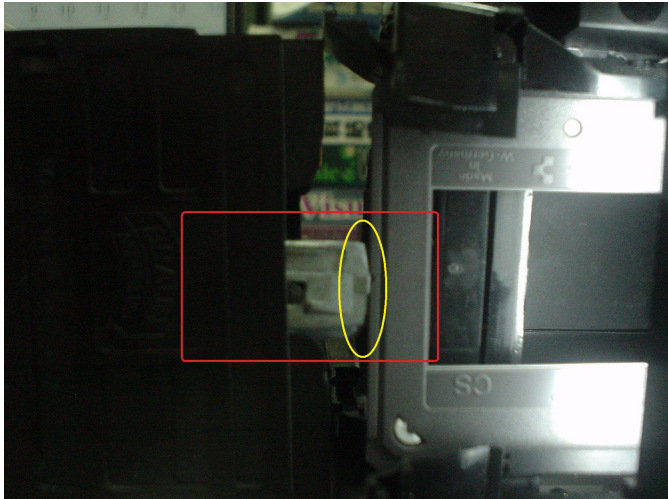


When using Paximat slide magazines, please ensure the push widget lever completely aligns in the middle of the slides, so the slides can be perfectly tapped by the push lever one by one.


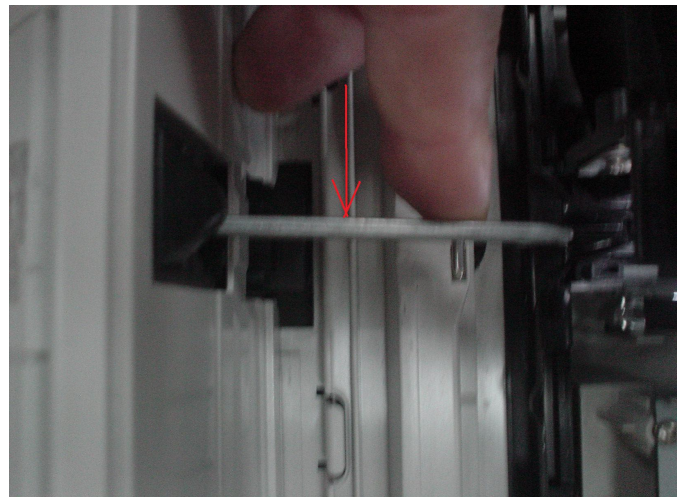


If the arm is not aligning in the center, you must gently press the Tappet arm in the opposite direction of the mis-alignment

#### Manual Adjusting I

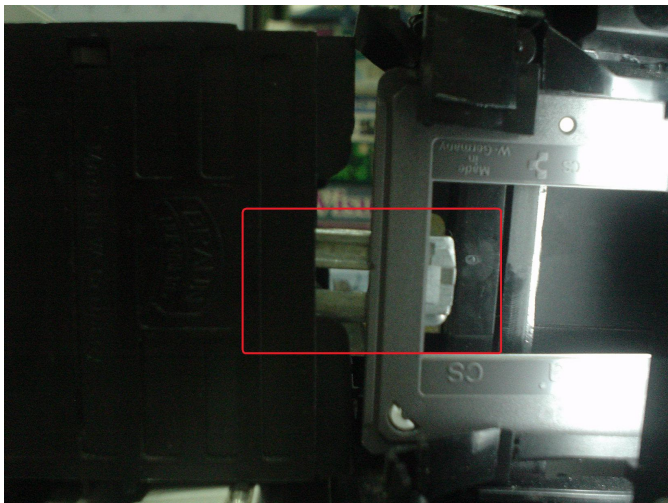

#### Manual Adjusting II

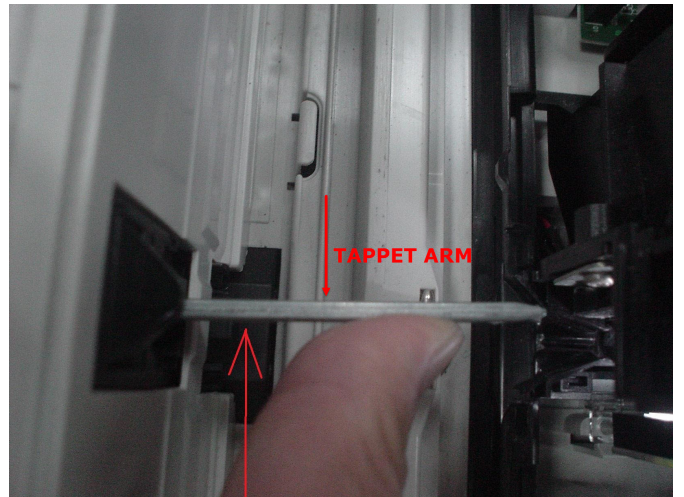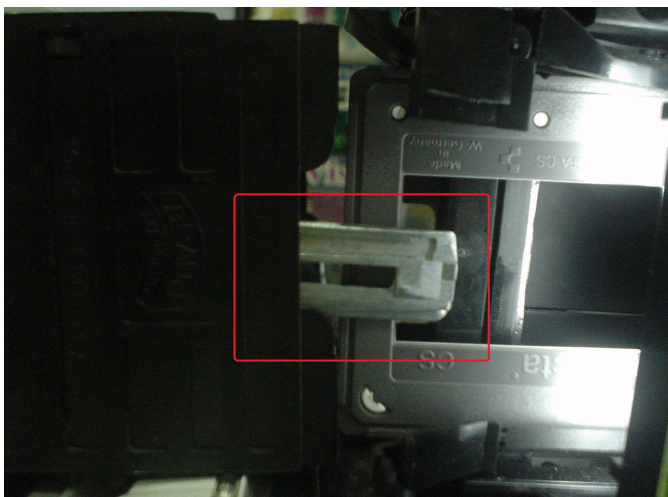

Sample image when the arm inserts slides in the correct location

