

How to Clean Diffuser

A. Image problem caused by dust

If your scanner has image problems as in these samples you can try to clean for dust & particles in the optical path (diffuser or lamp). Cleaning procedures are described on Page 2.

For PS36XX series, the problem image looks like Fig-1 (the shadow line appears horizontally).

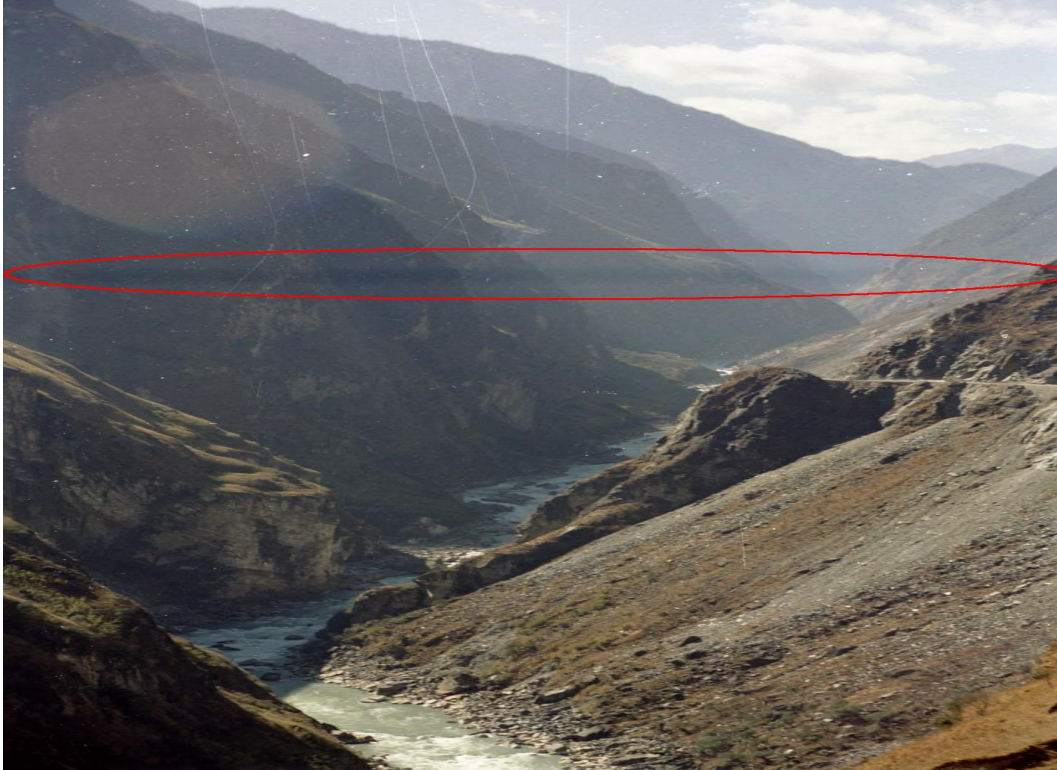


Fig - 1

B. Clean methods


PowerSlide 3600/3650

1. Lift up the Slide Holder by pressing the green button (Fig.1).



Fig. 1

2. Press Slide Holder down half way, then you can see the chassis **diffuser** (or **lamp** in the case of PS36XX) as Fig. 2.

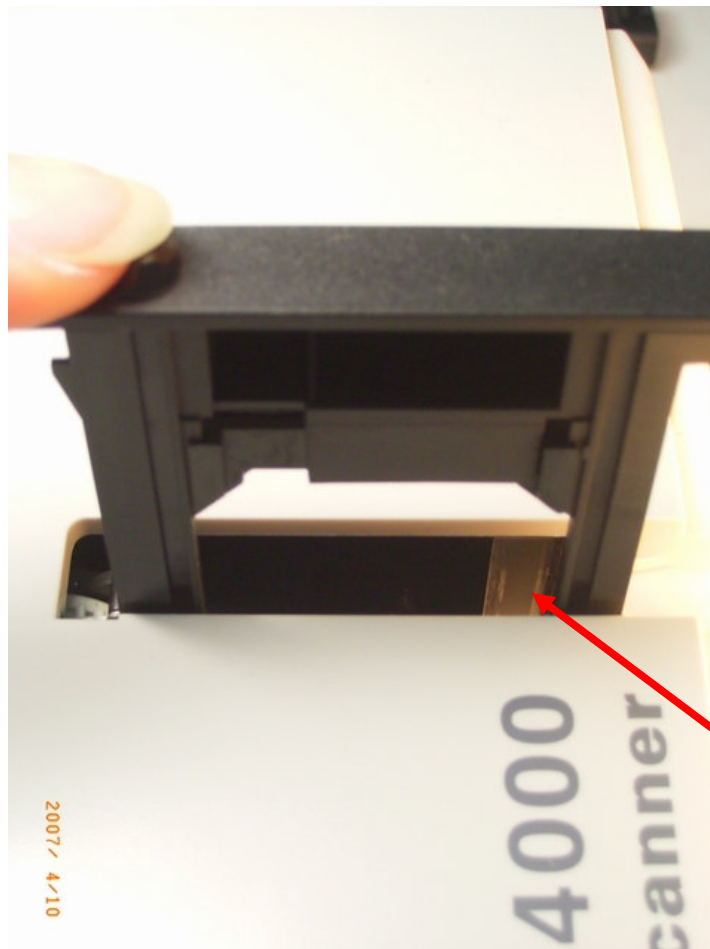

3. Blow on the **diffuser** (or **lamp**) using a can of compressed air with a straw attachment in quick short bursts

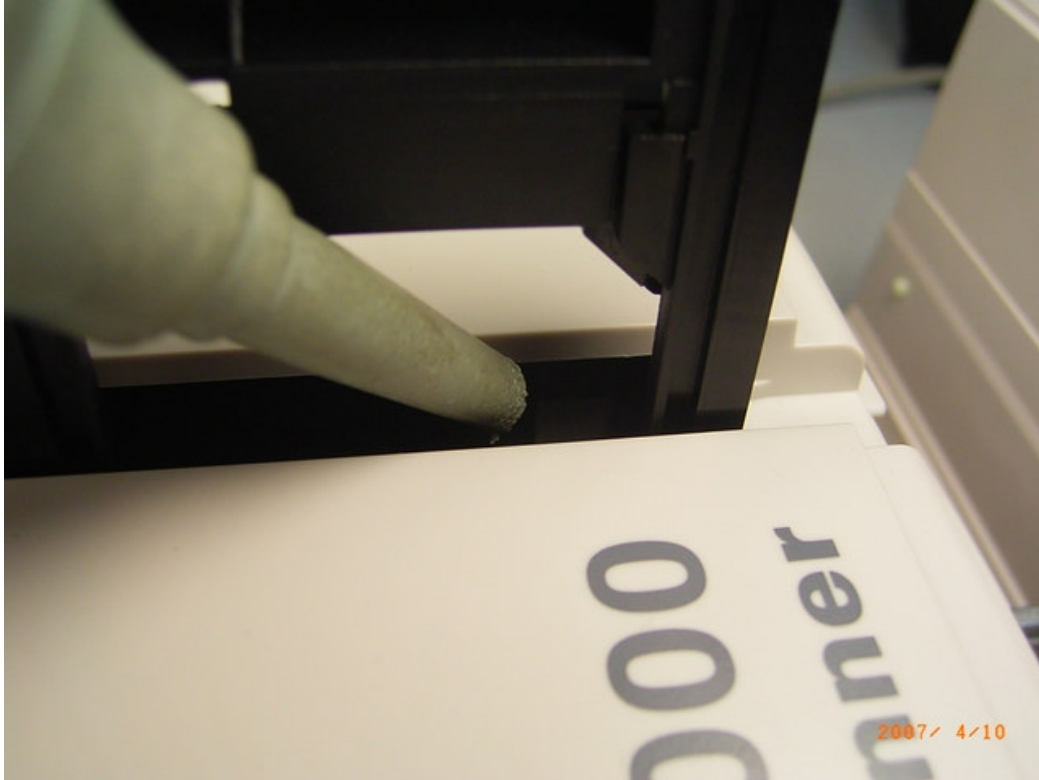


Fig. 3