

How to Clean Diffuser

Image problem caused by dust

If your scanner has image problems as in these samples you can try to clean for dust & particles in the optical path (diffuser or lamp). Cleaning procedures are described on Page 2.



Fig-1

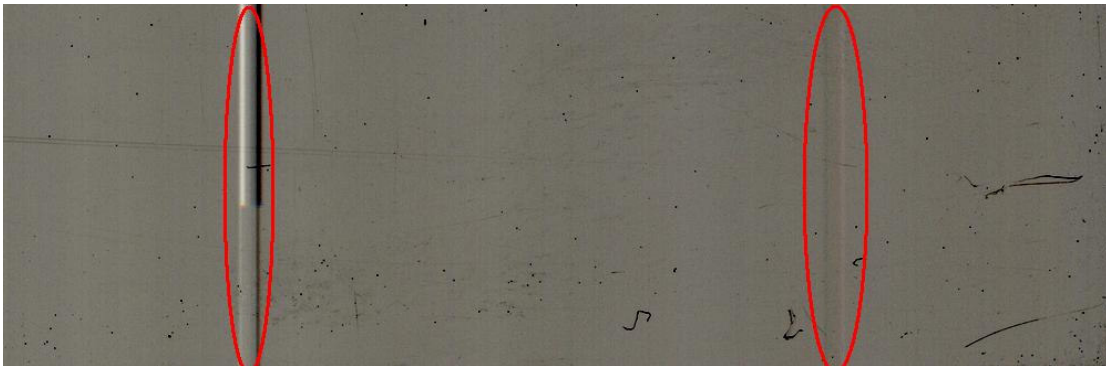


Fig-2

B. Clean methods

PrimeFilm Single Frame Series

1800u/i/s – 3600u - 3650u/7250u

1. Open the lid and slide cover (Fig. 3 & 4)

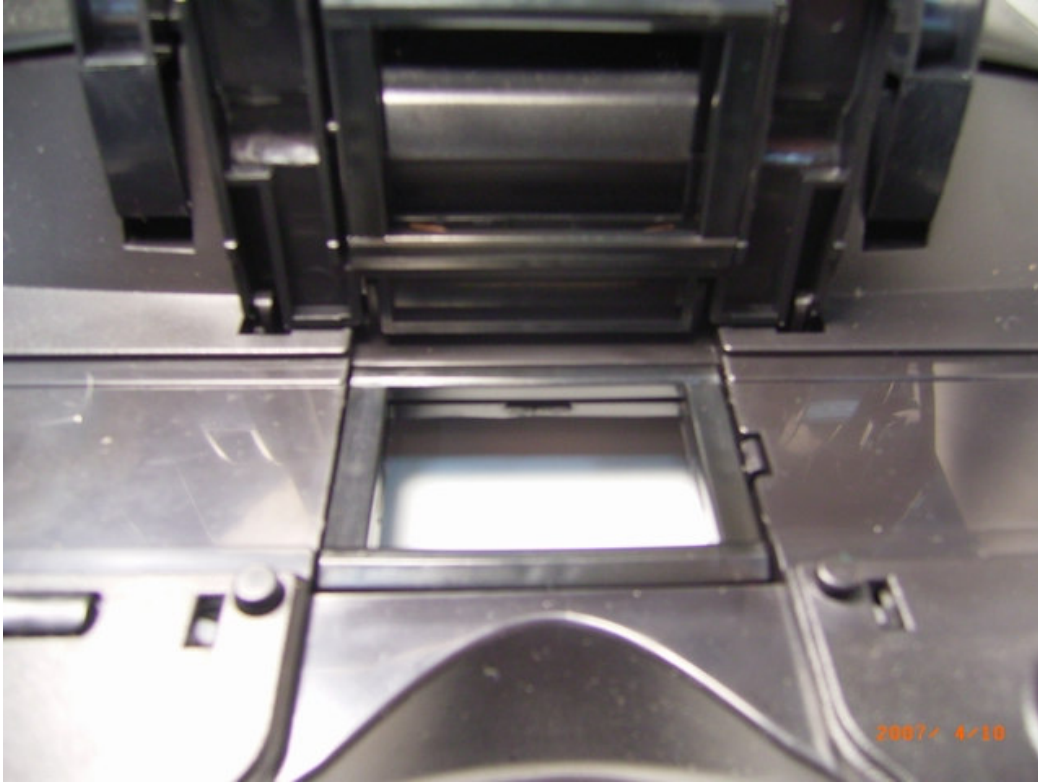


Fig. 3

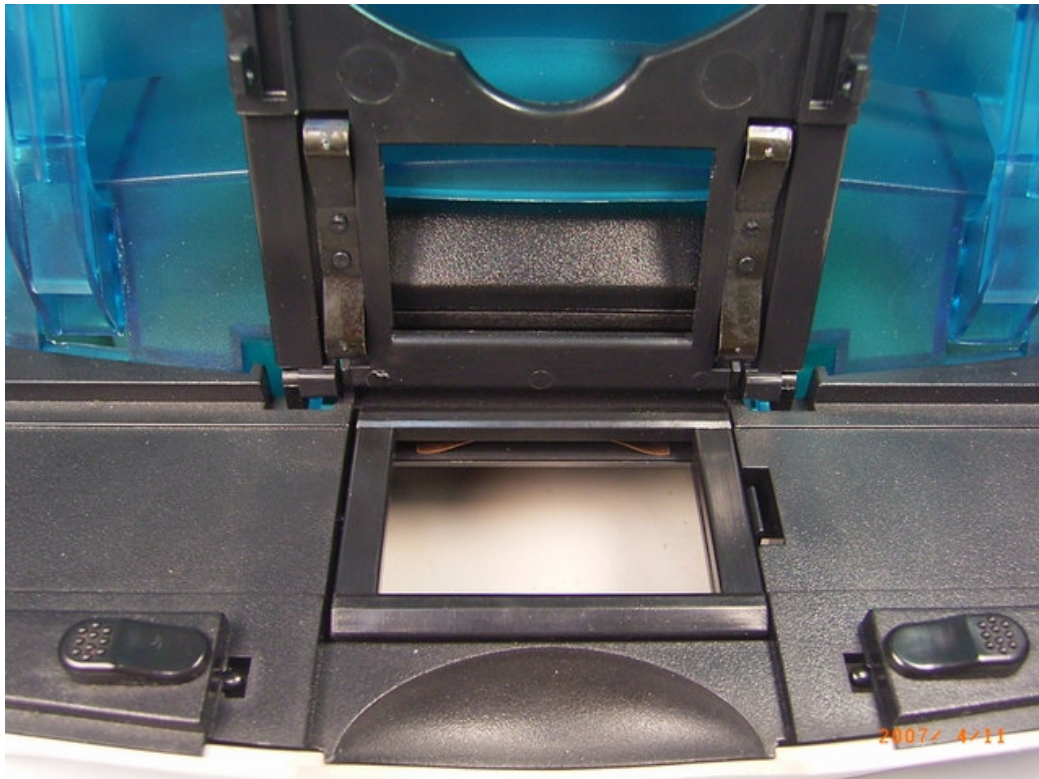


Fig. 4

2. Using a can of compressed air with straw attachment blow of the diffuser (hidden inside) left to right several times in quick short bursts in the red rectangle area (Fig. 5 & 6)

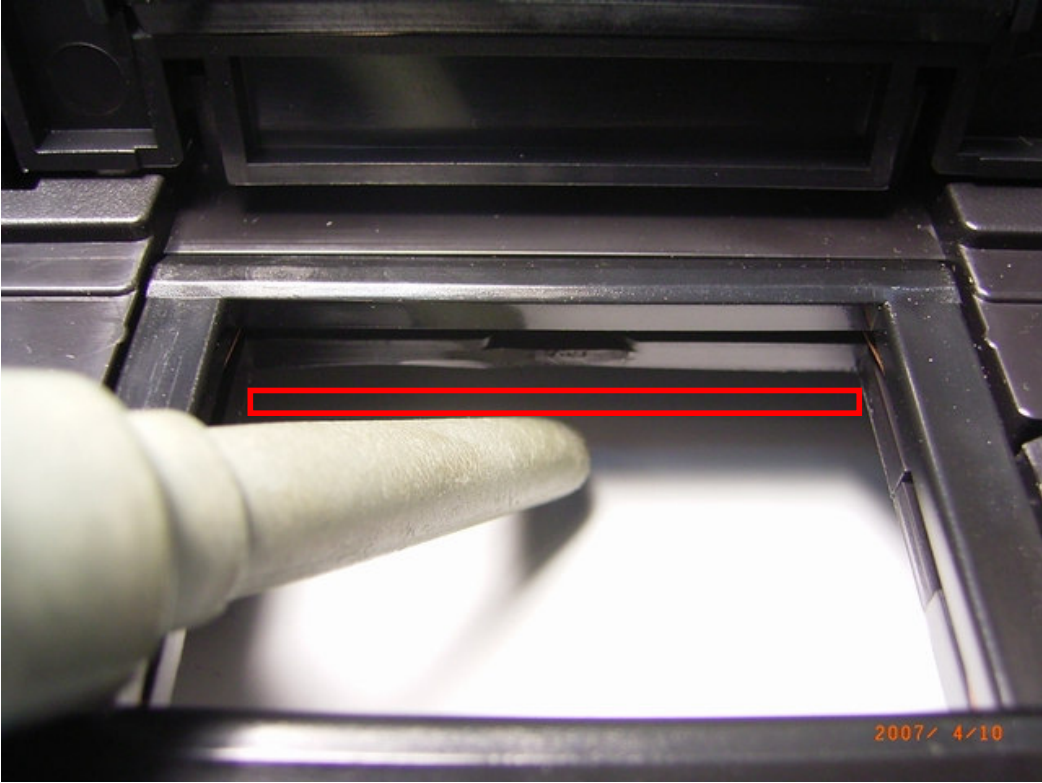


Fig. 5

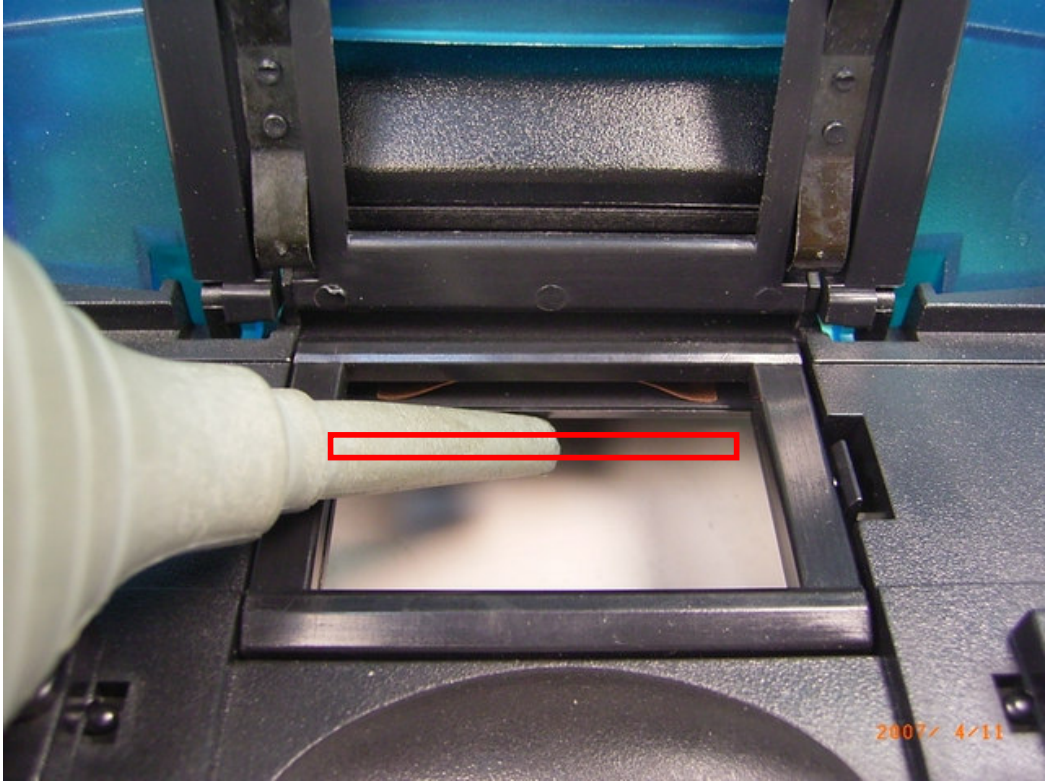


Fig. 6