

How to Clean the Diffuser

A. Image problem caused by dust

If your scanner has image problems as in these samples you can try to clean for dust & particles in the optical path (diffuser or lamp). Cleaning procedures are described on Page 2.

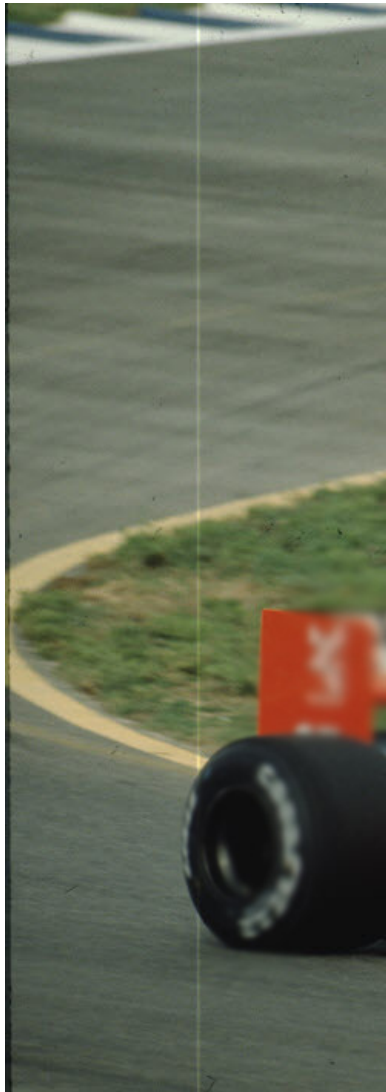



Fig-

B. Clean methods

PrimeFilm 3610AFL/ 7250Pro3 / XA

1. Using a can of compressed air with straw attachment blow of the diffuser (hidden inside) left to right several times in quick short bursts in the red rectangle area (Fig. 3)

Fig.3 for 3610AFL/7250Pro3/XA

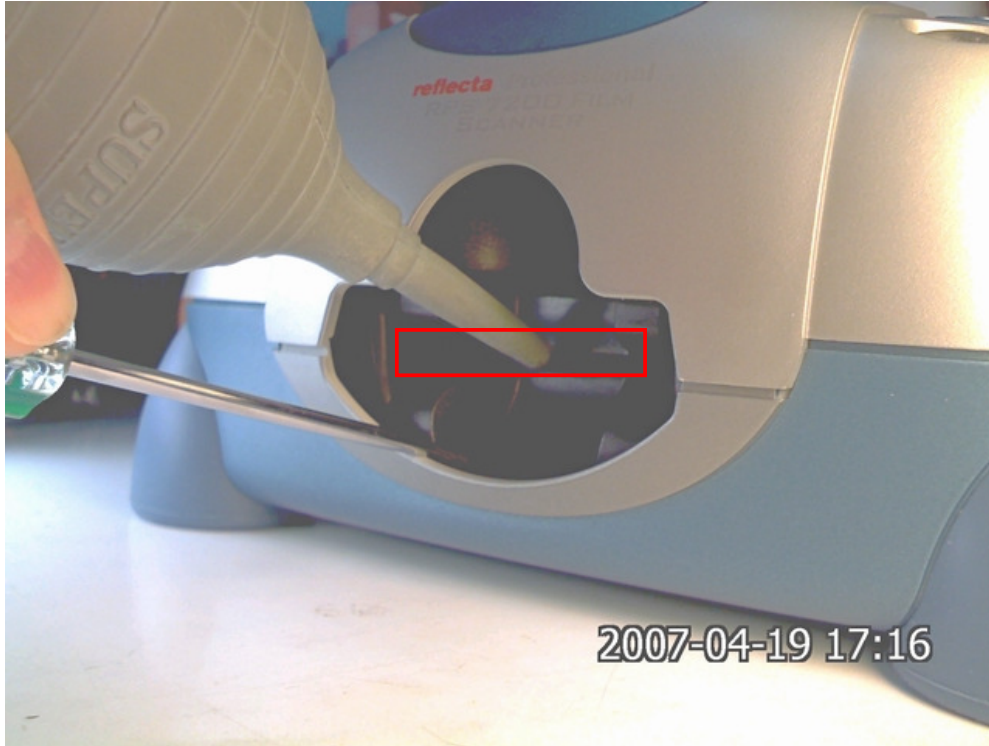

Insert bulb or compressed air Straw from the can about 2 inches, and give 4-5 quick burst of air to dislodge the debris.

